### **FEATURES**

The UFR filter regulator is intended for the compressed air or neutral gas treatment. Its function is that of supplying filtered air at the desired pressure for feeding devices working with compressed air. Robust aluminium body. The maximum inlet pressure is 10 bar. Adjustment is made using the upper pressure regulating knob which can be locked in position. It is delivered with an attachment bracket and a pressure gauge indicating the downstream pressure. The bowl is of plastic, with semi-automatic drain.

#### **AVAILABLE MODELS**

1/4" to 1" diameters. G thread connections 5  $\mu m$  standard filtration.



#### **LIMITS OF USE**

Fluid	compressed air or nitrogen
Fluid pressure : WP	0.5 - 10 bar
Fluid temperature: WT°	0°C / +50°C
Ambient temperature	-10°C / +60°C



### **SPECIFICATIONS**


Technology	Piston regulator	
Test pressure	15 bar	
Regulator accuracy	0.2 bar	
Filter conscient	1/4" - 3/8" - 1/2"	3/4"- 1"
Filter capacity	105 cc	210 cc
Lubuicatou conocitu	1/4" - 3/8" - 1/2"	3/4"- 1"
Lubricator capacity	125 cc	235 cc
Drain	Semi-automatic	


Information given as an indication only, and subject to possible modifications



Pages	1/4
Ref.	FT1720 ENG
Rev.	04
Date	10/2023

## **FLOW-RATE (litres/minute)**

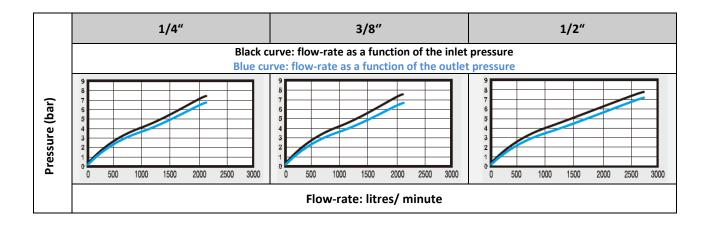

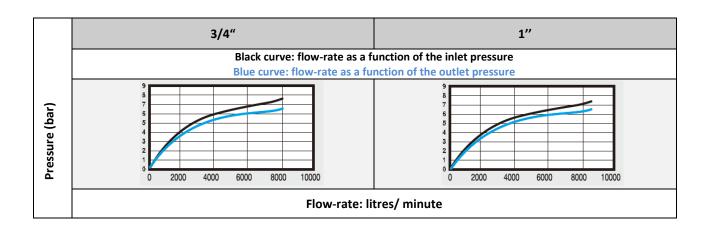


Information given as an indication only, and subject to possible modifications




Pages	2/4
Ref.	FT1720 ENG
Rev.	04
Date	10/2023

# DIMENSIONS (mm) (1/4" - 3/8" - 1/2")

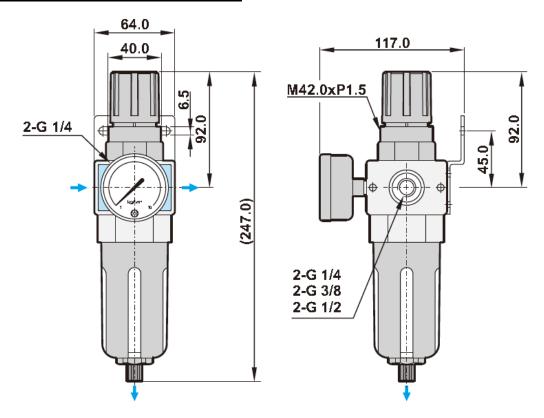

# **DIMENSIONS (mm) (3/4" - 1")**

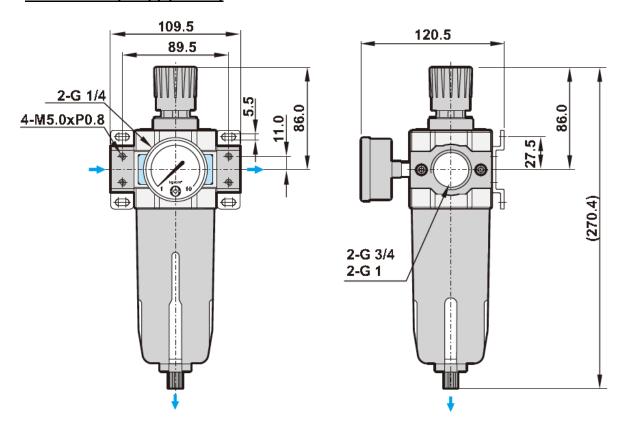

Information given as an indication only, and subject to possible modifications




Pages	3/4
Ref.	FT1720 ENG
Rev.	04
Date	10/2023

### WEIGHT (kg)

1/4"	3/8"	1/2"	3/4"	1"
0.9	0.9	0.9	1.35	1.35

### **INSTALLATION**

- 1 The device has to be mounted horizontally.
- 2 If need be, use the rear attachment strap.
- 3 Disconnect the pipework upstream.
- 4 Comply with the way of mounting indicated on the body.
- 5 Use a sealing material suitable for the fluid conditions.
- 6- Pressurize the pipework slowly.

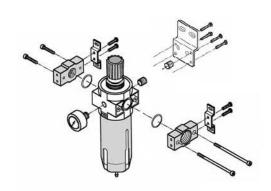

#### USE

- 1 To adjust the pressure, lift the pressure regulating knob
- 2 Turn the pressure adjustment knob clockwise to increase the downstream pressure, and anti-clockwise to decrease it.
- 3 Check the desired pressure on the pressure gauge.

**NOTE**: The device must depressurised before removing the lubrificator bolw.

### **SERVICING**

- 1 Periodically check the condensate level.
- 2 If necessary, replace the filter cartridge.

### **SPARE PARTS**

4/411 2/011 4/211	Filtration	Code
1/4" - 3/8" - 1/2"	40 μm	172720
	5 μm	172721
2/4// 4//	Filtration	Code
3/4" - 1"	40 μm	172722
	5 μm	172723

## **OPTION**

- Shut-off valve for the diameters: 1/4" - 3/8" - 1/2".

Information given as an indication only, and subject to possible modifications



Pages	4/4
Ref.	FT1720 ENG
Rev.	04
Date	10/2023