

SA 03 ELECTRIC ACTUATOR

FEATURES

The SA03 electric actuator is intended for motorising under on/off operation the 1/4 turn valves with a torque of at most 30 Nm. With a compact construction and epoxy-coated aluminium housing, it is especially well suited for motorising small diameter ball valves. Backlit dome position indicator. IP67 leak-tightness: it can be used both indoors and outdoors. Compliant with the EN 15714-2 standard.

AVAILABLE MODELS

Supply voltages: 230V AC and 24V AC/DC

LIMITS OF USE

IP Code	IP 67
Ambient temperature	- 20°C / + 70°C
Service factor	<u>S2</u> : 15 minutes / <u>S4</u> : 50%




MECHANICAL FEATURES

Gear box	treated steel pinions	
Torque	30 Nm	
Angle of rotation	90° +/- 5°	
Manoeuvring time	24V AC/DC	230V AC
	<u>AC</u> : 9 s / <u>DC</u> : 7 s	12 s
ISO 5211	F03 / F05 star 11	
Declutching	key-controlled	
Override control	using a 6 mm hex key	
Weight	1.5 kg	



ELECTRICAL FEATURES

Power	18 W	
Current	24V AC/DC	230V AC
	0.8 A	0.1 A
Motor protection	thermal	
Limit switches	2 adjustable switches	
Auxiliary switches	2 adjustable dry switches 250V AC 5A	
Anti-condensation	2x1.5W heater	
Electrical connection	2 x M20 x 1.5 (one PE and one plug provided)	

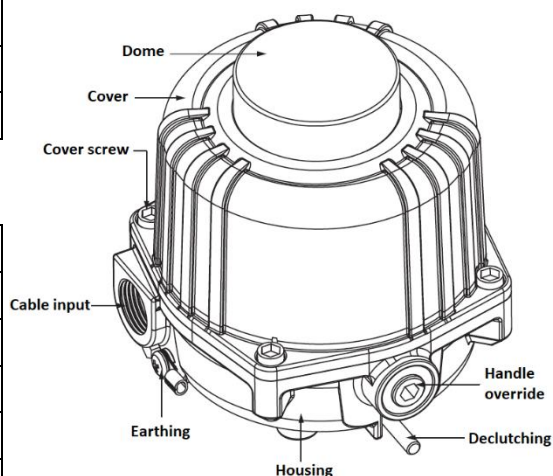


Information given as an indication only, and subject to possible modifications

	SECTORIEL S.A. 45 rue du Ruisseau 38290 SAINT QUENTIN-FALLAVIER – FRANCE Telephone: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95 www.sectoriel.com / Email: sectoriel@sectoriel.fr	Pages	1/5
		Ref.	FT23000 ENG
		Rev.	06
		Date	05/2023

SA 03 ELECTRIC ACTUATOR


DIMENSIONS (mm)

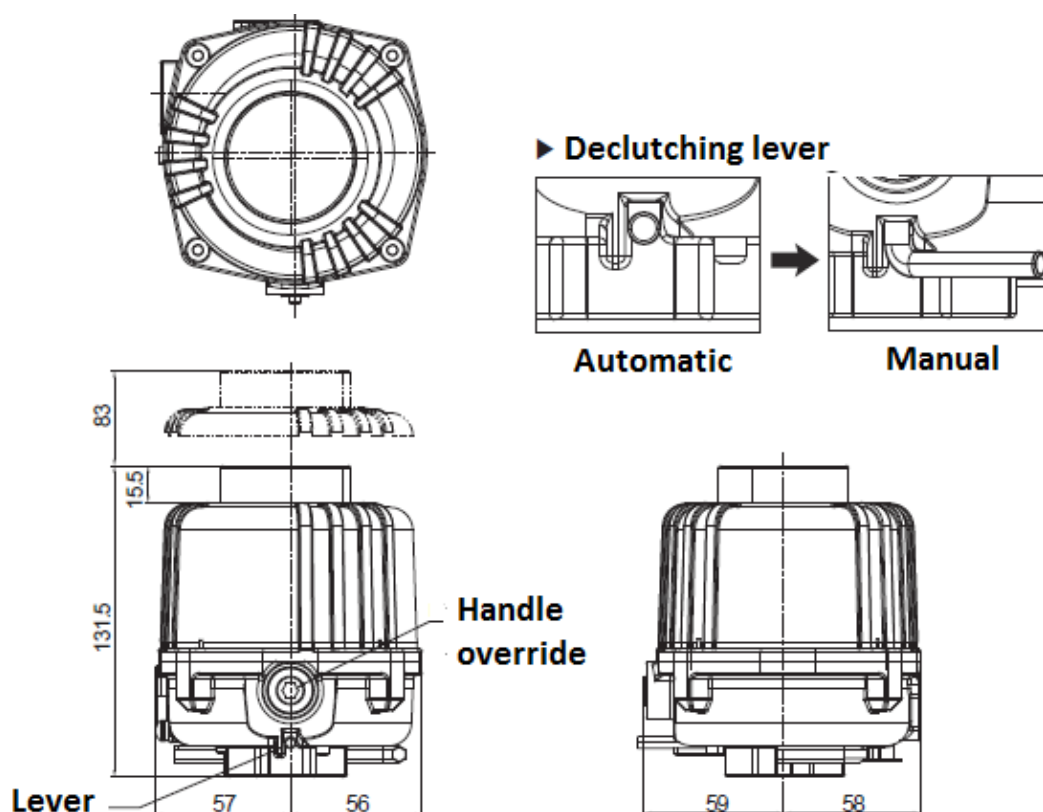

CONSTRUCTION

No.	Item	Material
1	Housing	Epoxy-coated aluminium alloy
2	Cover	Epoxy-coated aluminium alloy
3	Cover screw	Stainless steel
4	Dome	polycarbonate

ASSEMBLY POSITIONS

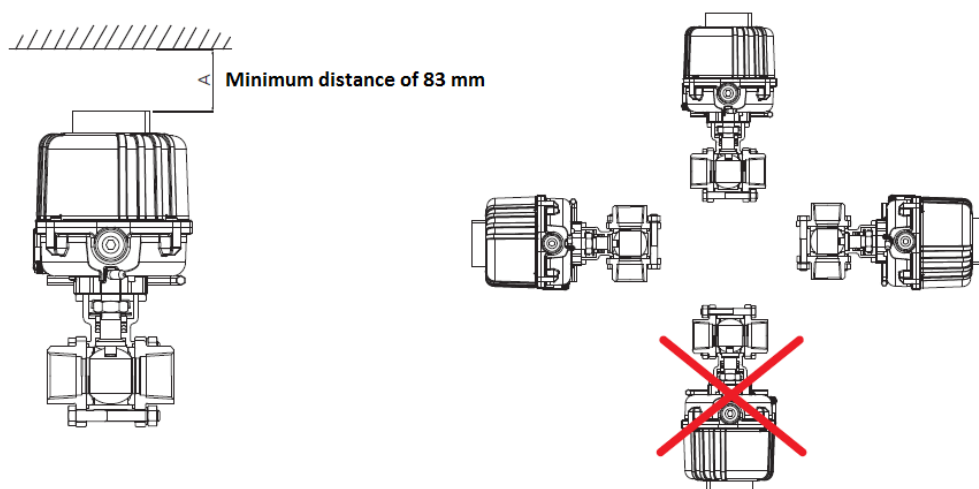

Information given as an indication only, and subject to possible modifications

	SECTORIEL S.A. 45 rue du Ruisseau 38290 SAINT QUENTIN-FALLAVIER – FRANCE Telephone: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95 www.sectoriel.com / Email: sectoriel@sectoriel.fr	Pages	2/5
		Ref.	FT23000 ENG
		Rev.	06
		Date	05/2023

SA 03 ELECTRIC ACTUATOR

GUARANTEE

Before any contact with our services, identify the type of actuator.

SECTORIEL actuators have a 12-month guarantee from the delivery date. The parts admitted as faulty by an assessment at our facility will be replaced at our expense. Complaints generated by incorrect use or a modification of the actuator, cannot be taken into account.

VERIFICATIONS AND ACCEPTANCE

At acceptance, check that:

- the packaging is in good condition,
- the actuator is as ordered,
- the equipment is not damaged.

It is recommended to install the actuator as soon as accepted and not to leave it unused. If the equipment has to be stored, it must be in a dry place protected from weather.

PRECAUTIONS FOR OPERATION

Before installing, make sure that the installation is completely depressurized and brought to ambient temperature.

Do not install this actuator in a zone classified as explosive (ATEX).

The IP Code of the actuator is IP67 for interior or exterior mounting. Do not install this actuator in a marine environment and do not immerse it.

The actuator must not be powered during installation and maintenance of the valve on the pipework, and of the actuator on the valve.

Before proceeding to the electrical connection, check the supply voltage of the actuator.

Do not mount the actuator in series or in parallel with other electrical motors. If need be, use relays.

Do not mount the actuator on valves with higher torque than the nominal torque of the actuator.

INSTALLATION AND OPERATION

Install the actuator on the valve (already done for the units assembled in our workshops)

Perform the electrical wiring as shown on the diagram below

Adjust the switch stops (already done for the units assembled in our workshops).

View the movement of the valve using the indicator light on the cover.

SA03 actuator: to use the manual override, first disconnect the electrical power, then turn the hollow hex-head screw with a hex key.




Reposition the manual override after use.

Information given as an indication only, and subject to possible modifications


	SECTORIEL S.A. 45 rue du Ruisseau 38290 SAINT QUENTIN-FALLAVIER – FRANCE Telephone: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95 www.sectoriel.com / Email: sectoriel@sectoriel.fr	Pages	3/5
		Ref.	FT23000 ENG
		Rev.	06
		Date	05/2023

SA 03 ELECTRIC ACTUATOR

SWITCH SETTING

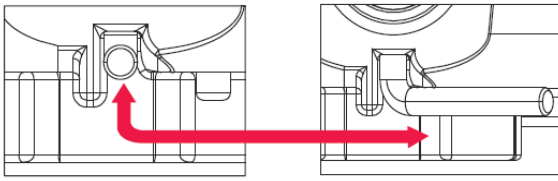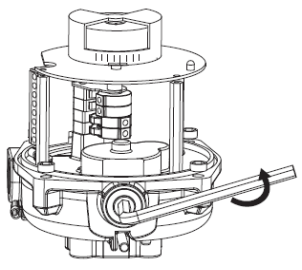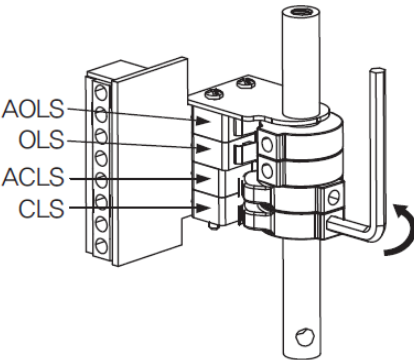1. Switch the actuator to manual mode	2. Turn the key to bring the valve, successively, in the open and closed positions, and to set the switches as shown below.							
 Auto Manual								
	The cams are attached to the drive stem							
	Clockwise rotation = valve closing. The micro-switch stops the actuator.							
	Anti-clockwise rotation = valve opening. The micro-switch stops the actuator.							
	<table> <tr> <td>CLS</td><td>Closing switch</td></tr> <tr> <td>OLS</td><td>Opening switch</td></tr> <tr> <td>ACSL</td><td>Auxiliary closing switch</td></tr> <tr> <td>OCSL</td><td>Auxiliary opening switch</td></tr> </table>	CLS	Closing switch	OLS	Opening switch	ACSL	Auxiliary closing switch	OCSL
CLS	Closing switch							
OLS	Opening switch							
ACSL	Auxiliary closing switch							
OCSL	Auxiliary opening switch							

SETTING THE POSITION INDICATOR

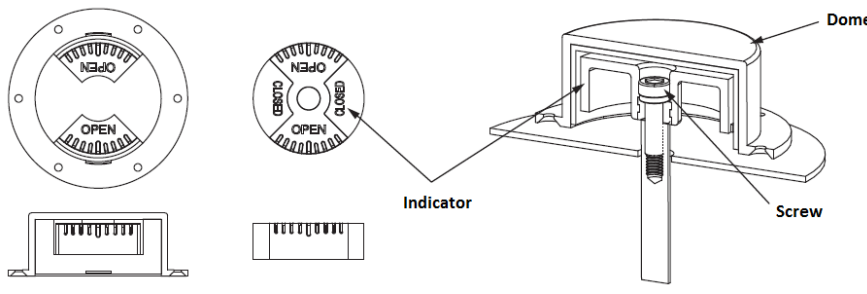 Dome Indicator Screw	The position of the valve is indicated by the indicator. If its alignment is incorrect, remove the cover and proceed to its setting by unscrewing the attachment screw.
--	--


Information given as an indication only, and subject to possible modifications

	SECTORIEL S.A. 45 rue du Ruisseau 38290 SAINT QUENTIN-FALLAVIER – FRANCE Telephone: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95 www.sectoriel.com / Email: sectoriel@sectoriel.fr	Pages	4/5
		Ref.	FT23000 ENG
		Rev.	06
		Date	05/2023


SA 03 ELECTRIC ACTUATOR

ELECTRICAL WIRING

Wiring for 110/230V AC voltages

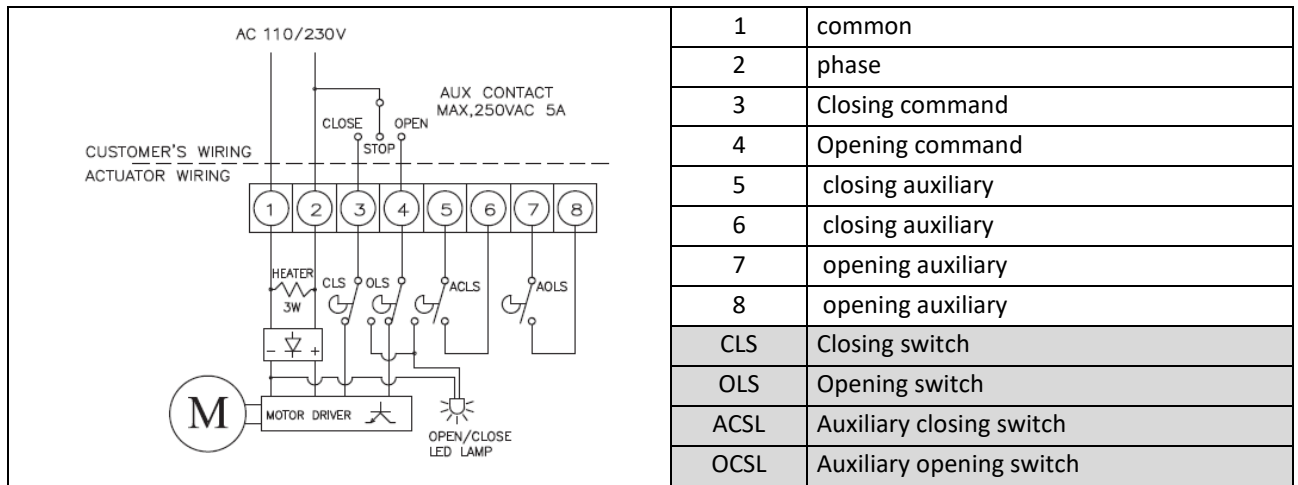

Wiring for 24V AC/DC voltages

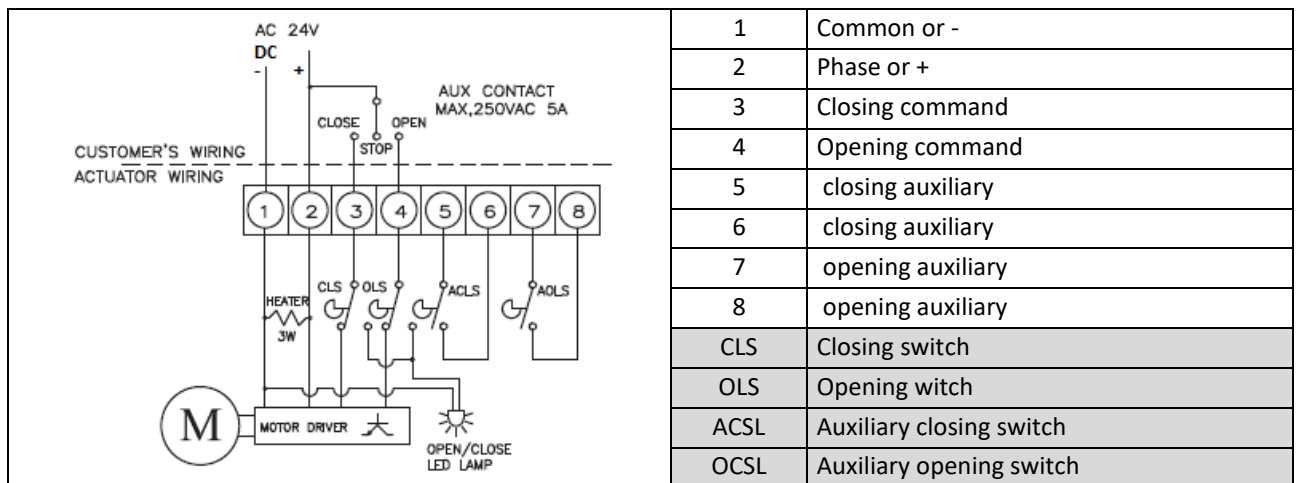

Information given as an indication only, and subject to possible modifications

	SECTORIEL S.A. 45 rue du Ruisseau 38290 SAINT QUENTIN-FALLAVIER – FRANCE Telephone: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95 www.sectoriel.com / Email: sectoriel@sectoriel.fr	Pages	5/5
		Ref.	FT23000 ENG
		Rev.	06
		Date	05/2023