

TCR-C SMART / 3P ELECTRICAL ACTUATOR

FEATURES

The TCR-C smart / 3P electric actuators are intended for motorising $\frac{1}{4}$ turn valves with a torque of 20, 50 or 90 Nm.

Smart function: the manoeuvring time is adjustable. With a compact construction and plastic housing, they are especially well suited for motorising small size ball valves. IP67 leak-tightness: to be used indoors and, possibly, outdoors under a shelter. Possible installation in parallel. Manual control with a key. As an option, the actuator can take a third position. (see § 3rd position).

AVAILABLE MODELS

Supply voltages: 230V AC, 24V AC/DC.


Dual frequency : 50Hz, 60Hz.

LIMITS OF USE

IP Code	IP 67
Ambient temperature	- 20°C / +60°C
Service factor	S4-50%

MECHANICAL FEATURES

Gear box	treated steel pinions
Torques	20 - 50 - 90 Nm
Angle of rotation	90° +/- 2°
Declutching	Without
Override control	By key



Actuator	TCR 02C		TCR 05C		TCR 11C	
Torques (Nm)	20	20	50		90	
Voltage	24V AC - DC	95-265V AC-DC	24V AC - DC	95-265V AC-DC	24V AC - DC	95-265V AC-DC
Manoeuvring time (s)	10 to 50	10 to 50	12 to 60	12 to 60	10 to 50	10 to 50
ISO 5211:	F03/F05 - star 11		F05/F07 - star 14		F05/F07 - star 17	

ELECTRICAL FEATURES

Actuator	TCR 02C	TCR 05C	TCR 11C
Motor protection	Thermal switch		
Limit switches	Without		
Auxiliary switches	Without		
Anti-condensation	integrated		
Electrical connection	PE M10 + 1.5m cable	PE M20 + 1.5m cable	2 x PE M14 + 1.5m cable

Actuator	TCR 02C		TCR 05C		TCR 11C	
Voltage	24V AC - DC	95-265V AC-DC	24V AC - DC	95-265V AC-DC	24V AC - DC	95-265V AC-DC
Power (W)	15	15	25	25	100	100
Current (A)	0,35	0,035 - 0,075	0,83	0,035 - 0,075	2,5	0,26 - 0,52
Fuse protection (A)	2	1	4	2	5	2


Information given as an indication only, and subject to possible modifications

	SECTORIEL S.A. 45 rue du Ruisseau 38290 SAINT QUENTIN-FALLAVIER – FRANCE Telephone: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95 www.sectoriel.com / Email: sectoriel@sectoriel.fr	Pages	1/10
		Ref.	TDS2414 ENG
		Rev.	08
		Date	05/2025


TCR-C SMART / 3P ELECTRICAL ACTUATOR

CONSTRUCTION (TCR-02C)

TCR-02C					
No.	Name	Material	No.	Name	Material
1	Casing + lid	Plastic (ABS)	7	1.3" LCD display	OLED
2	Position indicator	Polycarbonate plastic	8	Rating plate	PVC
3	Screw x 4	Aisi 304	9	Packing gland	Nylon
4	Backup control stem	Aisi 304	10	Hex key	Steel
5	Gasket	NBR	11	Key support	Plastic (ABS)
6	Adjustment button	Rubber	12	Cover gasket	NBR
Weight (kg): 0.620					

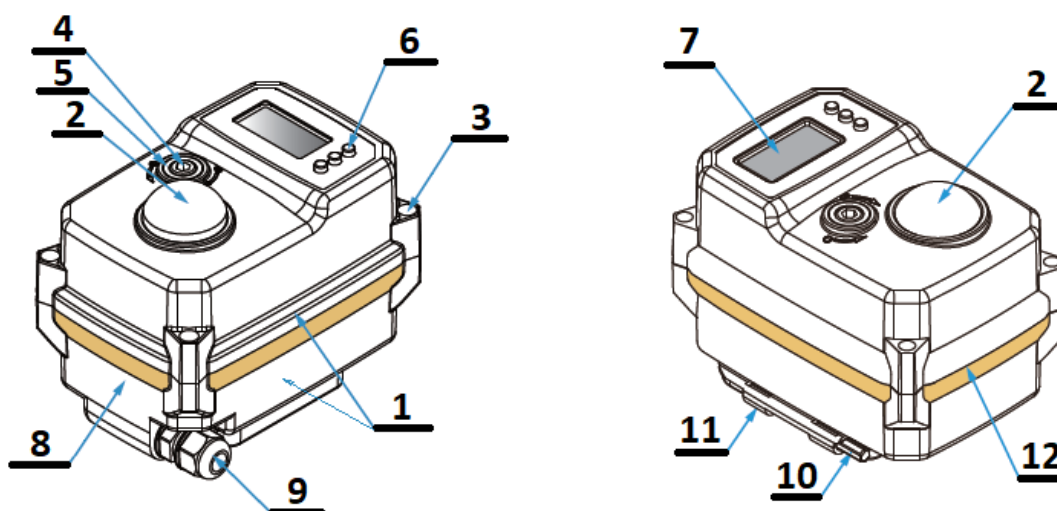

DIMENSIONS (mm)

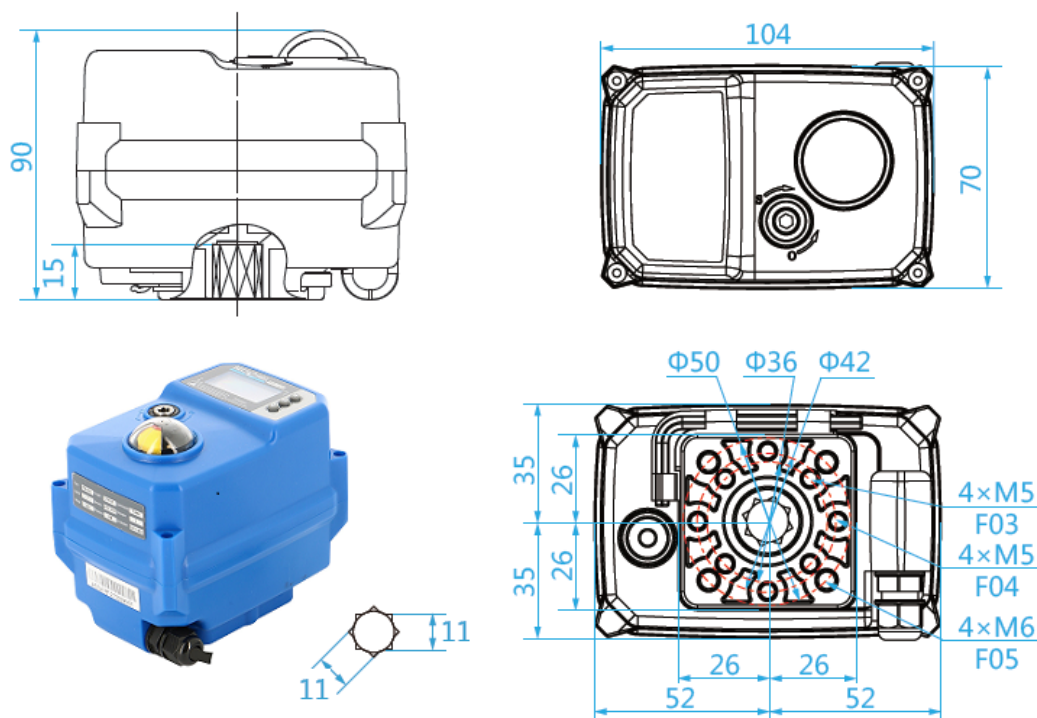


Information given as an indication only, and subject to possible modifications

	SECTORIEL S.A. 45 rue du Ruisseau 38290 SAINT QUENTIN-FALLAVIER – FRANCE Telephone: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95 www.sectoriel.com / Email: sectoriel@sectoriel.fr	Pages	2/10
		Ref.	TDS2414 ENG
		Rev.	08
		Date	05/2025


TCR-C SMART / 3P ELECTRICAL ACTUATOR

CONSTRUCTION (TCR-05C)

TCR-05C					
No.	Name	Material	No.	Name	Material
1	Casing + lid	Plastic (ABS)	7	1.3" LCD display	OLED
2	Position indicator	Polycarbonate plastic	8	Rating plate	PVC
3	Screw x 6	Aisi 304	9	Packing gland	Nylon
4	Backup control stem	Aisi 304	10	Hex key	Steel
5	Gasket	NBR	11	Key support	Plastic (ABS)
6	Adjustment button	Rubber	12	Cover gasket	NBR
Weight (kg): 1.800					

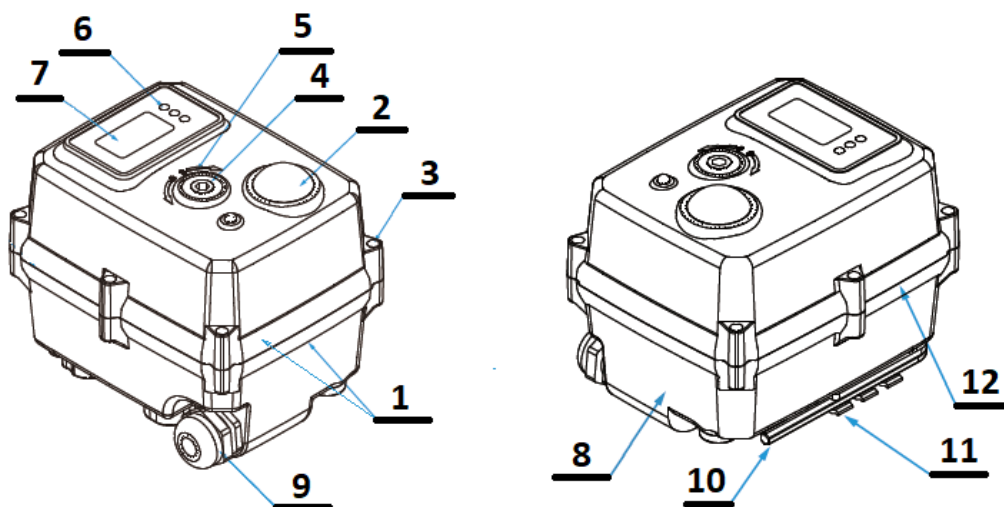

DIMENSIONS (mm)

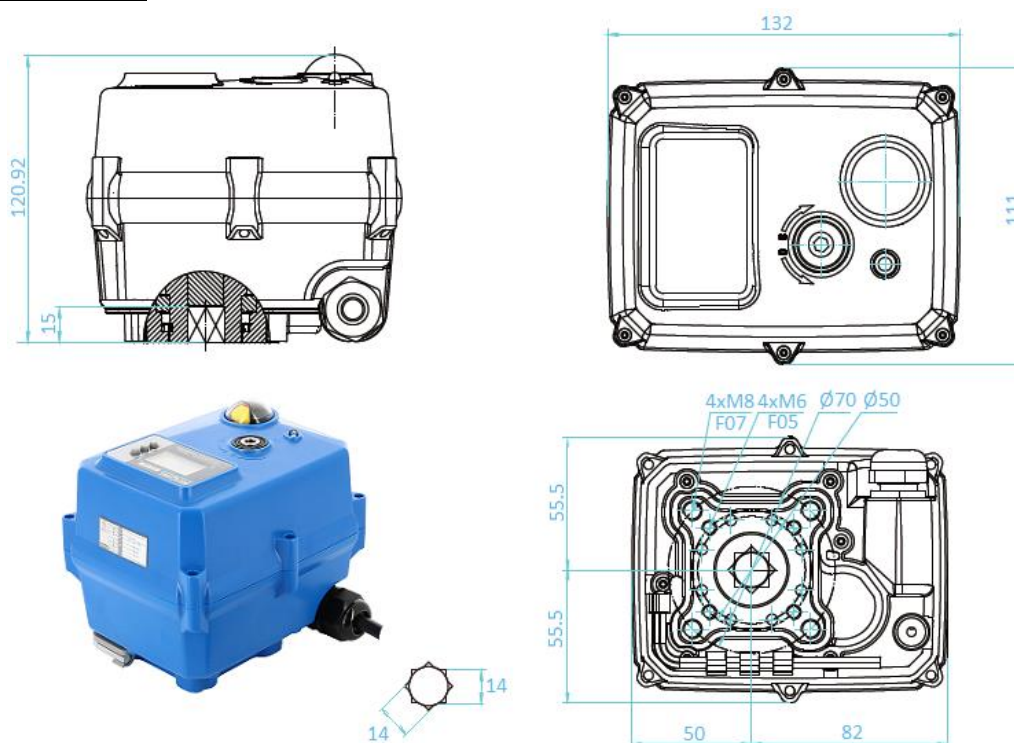

Information given as an indication only, and subject to possible modifications

	SECTORIEL S.A. 45 rue du Ruisseau 38290 SAINT QUENTIN-FALLAVIER – FRANCE Telephone: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95 www.sectoriel.com / Email: sectoriel@sectoriel.fr	Pages	3/10
		Ref.	TDS2414 ENG
		Rev.	08
		Date	05/2025


TCR-C SMART / 3P ELECTRICAL ACTUATOR

WIRING DIAGRAM

It is used to provide a third position, other than the “open” and “closed” position. The percentage of opening of the third position is set from the parameter setting menu. On the side of control, the programming of taking the 3 positions is carried out as follows:

SW1	SW2	Actuator position	Returns from limit switches
Engaged	Disengaged	0°	WT connected with BN
Disengaged	Engaged	90°	WT connected with GY
Engaged	Engaged	Can be set from 10% to 220% of the opening, i.e. between 9° and 198° of opening.	WT connected with GY and BN

WIRING DIAGRAM

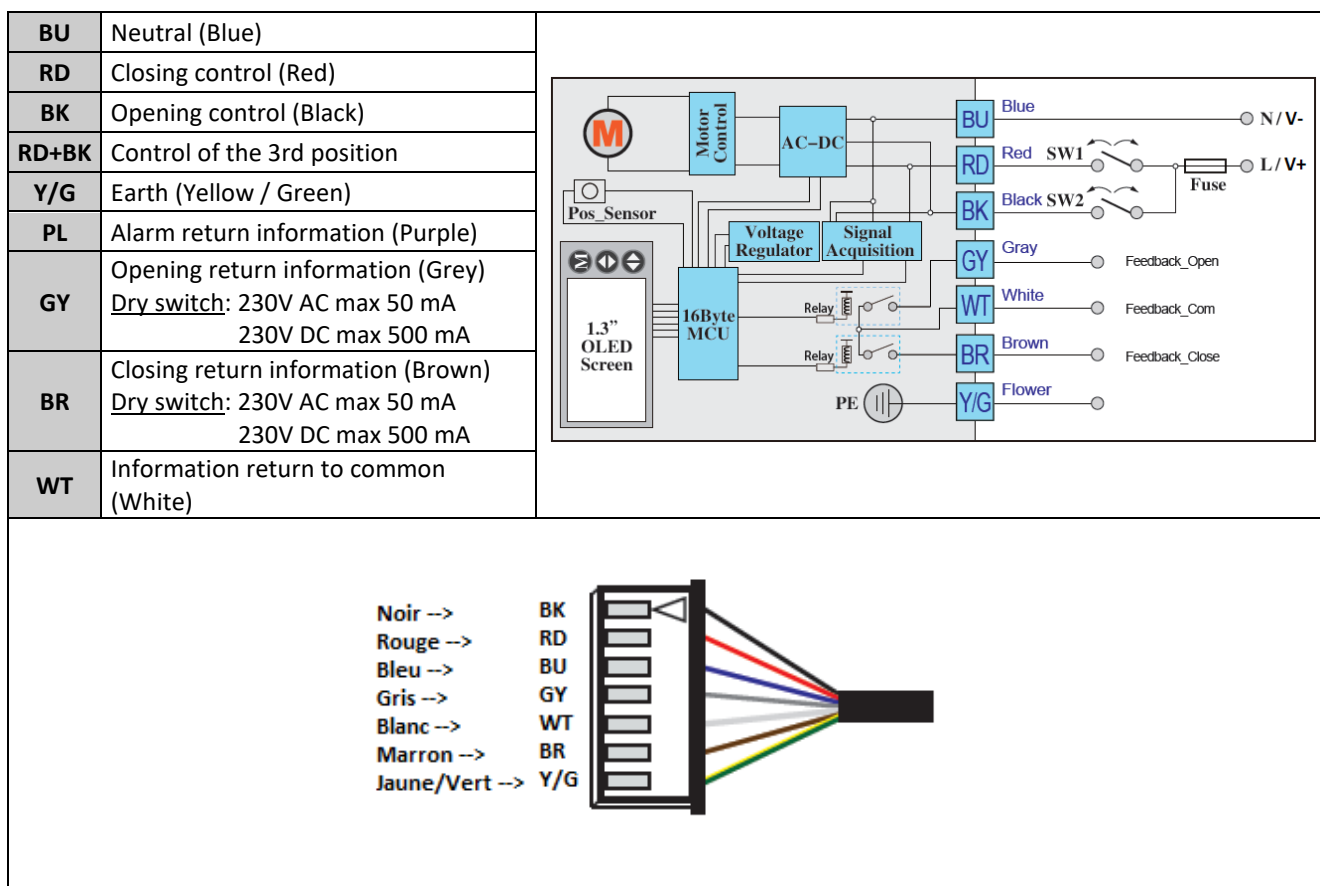


Information given as an indication only, and subject to possible modifications

	SECTORIEL S.A. 45 rue du Ruisseau 38290 SAINT QUENTIN-FALLAVIER – FRANCE Telephone: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95 www.sectoriel.com / Email: sectoriel@sectoriel.fr	Pages	5/10
		Ref.	TDS2414 ENG
		Rev.	08
		Date	05/2025

TCR-C SMART / 3P ELECTRICAL ACTUATOR

DESCRIPTION OF THE 1.3" LCD SCREEN

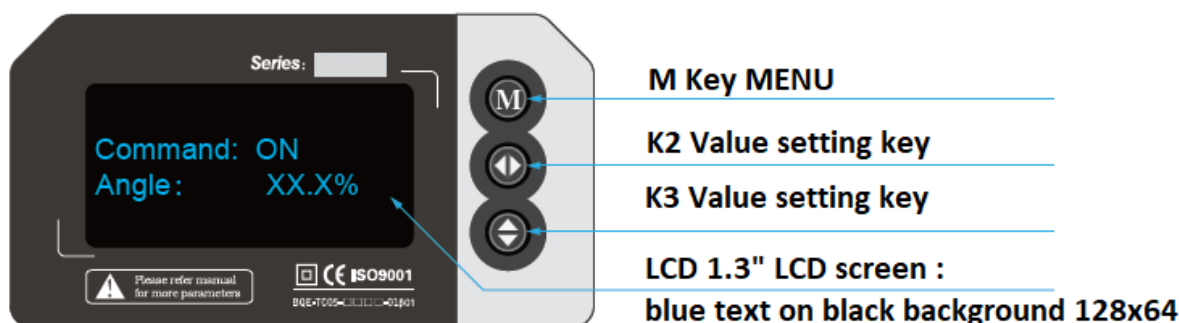

ACTUATOR SETTINGS

The following functions can have their parameters set from the menu accessible on the screen:

STEP	TITLE	FUNCTION AND VALUES
1	Entering the menu	Press the "M" button for more than 5 s.
2	Enter the password	Press the "M" button for more than 5 s. Enter the code "333" (use the keys K2 and K3) Press again the button "M" UserSET: PassWord: XXX
3	Dead band	This function is used to set the accuracy and the sensitivity of the control: the larger the band, the lower the accuracy; the narrower the band, the more oscillating the system can be. Setting range: 0.1 to 9.9% - Setting by default: 1% UserSET: DeadZone: X.X% UserSET: DeadZone: 0.1% minimum UserSET: DeadZone: 9.9% maximum
4	Hysteresis adjustment	This parameter setting is a prerequisite for the next. YES = adjustment is possible NO = no adjustment is possible (value by default) UserSET: IsGO_Hyste: NO UserSET: IsGO_Hyste: YES

Information given as an indication only, and subject to possible modifications

	SECTORIEL S.A. 45 rue du Ruisseau 38290 SAINT QUENTIN-FALLAVIER – FRANCE Telephone: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95 www.sectoriel.com / Email: sectoriel@sectoriel.fr	Pages	6/10
		Ref.	TDS2414 ENG
		Rev.	08
		Date	05/2025

TCR-C SMART / 3P ELECTRICAL ACTUATOR

5	Hysteresis value	If the previous parameter is "YES", it is possible to set the hysteresis value between 0.1 and 12%. The value by default is 0.5%. Do not use the function if there is a play between the valve's stem and the actuator's square.
		UserSET: Hysteres: X.X% UserSET: Hysteres: 0.1% UserSET: Hysteres: 9.0%
6	Slight adjustment of the closed position	It is possible to change the closed position of the automatic valve, by a few degrees. This function is interesting if a leak is found along the line. Press key K3 to decrease the opening angle 0.1° (down to -8.5° max) and K2 to (up to -8,5° max). Press key M to move to the next parameter.
		UserSET: ClPos_Adj: X.X° UserSET: ClPos_Adj: X.X° Offset-Open UserSET: ClPos_Adj: X.X° Offset-Close UserSET: ClPos_Adj: -X.X° This is minimum UserSET: ClPos_Adj: X.X° This is maximum
7	Manual adjustment of the speed of rotation	This function is used for slowing down the motor. Range: 20-100% - Value by default = 100%
		UserSET: Speed_PUL: XX% UserSET: Speed_PUL: 100% This is maximum UserSET: Speed_PUL: 5% This is minimum
8	Setting the operating speed	It is possible to set the operating speed of the actuator to 5 to 100% of the rated speed. The value by default, is 100%. Press key K3 to increase the speed (max 100%) or K2 to decrease it (min 5%). Press key M to move to the next parameter. Nota: it is not recommended to combine functions 5 and 6, the actuator could become overcharged.
		UserSET: Speed_PWM: 100%
9	Response time	Used to set the response speed of the valve. The smaller the value, the less sensitive the control. The bigger the value, the more sensitive it is. Increase the value when the response speed is too low. Setting range: 1x20x – Value by default 3x
		UserSET: StallTime: 3X UserSET: StallTime: 1X minimum UserSET: StallTime: 20X maximum
10	Parameter setting for the 3 rd position	This function is accessible only on an actuator with a "B33" option (see last §).
		UserSET: B33Posi: 50%

Information given as an indication only, and subject to possible modifications

	SECTORIEL S.A. 45 rue du Ruisseau 38290 SAINT QUENTIN-FALLAVIER – FRANCE Telephone: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95 www.sectoriel.com / Email: sectoriel@sectoriel.fr	Pages	7/10
		Ref.	TDS2414 ENG
		Rev.	08
		Date	05/2025

TCR-C SMART / 3P ELECTRICAL ACTUATOR

11	Inverting the opening and closing controls	The parameter setting is used to invert the opening and closing controls. The B33 parameter setting is not affected. Parameter setting by default: "NO" UserSET: CMD_Swap: Yes
12	Actuator's position when SW1 (RED) and SW2 (BLACK) are engaged	This parameter setting is available only the B33 version: 4 different positions can have their parameters set: open, closed, unchanged or 3rd position Parameter setting by default: KEEP UserSET: BothIN_ON: KEEP UserSET: BothIN_ON: OFF UserSET: BothIN_ON: ON UserSET: BothIN_ON: B33
13	Actuator's position when SW1 (RED) and SW2 (BLACK) are disengaged	This parameter setting is available only the B33 version: 4 different positions can have their parameters set: open, closed, unchanged or 3rd position Parameter setting by default: KEEP UserSET: Both IN_OFF: KEEP UserSET: Both IN_OFF: OFF UserSET: Both IN_OFF: ON UserSET: Both IN_OFF: B33
14	Checking the feed signal	The actuator periodically tests its electrical power supply. A change of a value will change the interval between two tests. In current use, there is no need to change this parameter. UserSET: PDChk_Time: 100%
15	Power supply position by default	This parameter setting is not available on the standard version Parameter setting by default: KEEP UserSET: PDAction: KEEP UserSET: PDAction: OFF UserSET: PDAction: ON
16	Super-capacitor charge	This parameter is not available on the standard version Value by default: 95% UserSET: BatCharge: XX% UserSET: BatCharge: 60% Minimum UserSET: BatCharge: 99% Maximum
17	Actuator locking after the intervention of the super-capacitor	This parameter is not available on the standard version Value by default: UNLOCK UserSET: MotLock: LOCK UserSET: MotLock: UNLOCK

Information given as an indication only, and subject to possible modifications

	SECTORIEL S.A. 45 rue du Ruisseau 38290 SAINT QUENTIN-FALLAVIER – FRANCE Telephone: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95 www.sectoriel.com / Email: sectoriel@sectoriel.fr	Pages	8/10
		Ref.	TDS2414 ENG
		Rev.	08
		Date	05/2025

TCR-C SMART / 3P ELECTRICAL ACTUATOR

18	Choice of language	English or Mandarin
		UserSET: DisMode: English UserSET: DisMode: Chinese
19	Alarm test	This function is used to control whether a defect alarm is broadcast or not. It is especially used for factory testing Value by default: ON
		UserSET: Test Alarm: ON
20	Exiting the menu	Press K3 to exit the menu The system will switch back in the automatic checking mode.
		UserSET: ExitSET: Push K3
21	Activate the 3rd position	User should input password '505' enter into user set . Press M to switch to following parameter :
		RD=+ RD=+ RD=+ RD=+ BK=- BK=- BK=- BK=- OFF 0° ON 90° B33 180° B44 270° RD+BK-:Left-Mid
22	Parameter setting 3rd position	Press K2 to switch to RD+BK+ and then press K3 to switch the option as "B33_SET" as following
		RD=+ RD=+ RD=+ RD=+ BK=- BK=- BK=- BK=- OFF 0° ON 90° B33 180° B44 270° RD+BK+:B33_SET
23	Parameter setting the percentage value (%) of the 3rd position	Press M to change the following parameter B33Posi and choose the desired percentage value.
		UserSET: B33Posi: 50.0% 
24	Saving parameter settings	Press M until exit and then press K3 to save above setting.

Information given as an indication only, and subject to possible modifications

	SECTORIEL S.A. 45 rue du Ruisseau 38290 SAINT QUENTIN-FALLAVIER – FRANCE Telephone: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95 www.sectoriel.com / Email: sectoriel@sectoriel.fr	Pages	9/10
		Ref.	TDS2414 ENG
		Rev.	08
		Date	05/2025

TCR-C SMART / 3P ELECTRICAL ACTUATOR

TROUBLESHOOTING

Defect met	Cause of defect	Method of solving
Inactive actuator	Non-connected electrical grid.	Connect to the electrical grid.
	Wrong voltage.	Check the actuator's voltage.
	Motor overheating.	Check the torque on the valve.
	Faulty connection.	Check the connection to the terminal box.
	Damaged start capacitor.	Contact the supplier for repair.
No switch signal	Faulty connection.	Check the connections.
	Damaged microswitch	Change the microswitch
Valve that is not fully closed	Use the return signal from the actuator check.	Receiving a return signal does not mean that the actuator is fully closed, hence do not cut the power supply.
	The hysteresis increases due to wear or between the actuator and the valve's stem.	Readjust the limit cams. Contact the supplier for repair.
Presence of humidity or water in the actuator	Unsuitable cable cross-section being used.	Contact the supplier for repair.
	The cable connection is not leak-tight.	
	Worn sealing gaskets.	
	Loose cover screws.	Dry the internal parts and tighten the cover screws.

Information given as an indication only, and subject to possible modifications

	SECTORIEL S.A. 45 rue du Ruisseau 38290 SAINT QUENTIN-FALLAVIER – FRANCE Telephone: +33 4 74 94 90 70 - Fax: +33 4 74 94 13 95 www.sectoriel.com / Email: sectoriel@sectoriel.fr	Pages	10/10
		Ref.	TDS2414 ENG
		Rev.	08
		Date	05/2025